



These pins are connected to GND or VCCINT. You need to set them as INPUT.

These pins are connected to GND or VCCINT. You need to set them as INPUT.

These pins are connected to GND or VCCINT. You need to set them as INPUT.

These pins are connected to GND or VCCINT. You need to set them as INPUT.



HuMANDATA LTD.
OSAKA JAPAN
www.hdl.co.jp/en/(Global)
www.hdl.co.jp/(Japan)

CycloneIII FPGA Board(PG240)

DOC. No.	ACM-304	B
Date:	14-Sep-2009	11:13:28
File:	ACM304B.sch	Sheet 1 of 1

ACM304b.sch.pdf