

CDC Class Driver Installation Guide

Ver. 1.5

[USB series]

USB-034	USB-036	USB-037
USB-045A	USB-045V	USB-201
USB-205	USB-206	USB-207
USB-403	USB-501	USB-502


[LNX series]

LNX-202		
---------	--	--

Table of Contents

- Precautions 1
- Revision History 1
- Introduction 2
- 1. Installation procedure..... 3
- 2. Uninstallation procedure..... 5
- 3. Downloads 6
- 4. Warranty and compensation..... 6

● **Precautions**

 Attention	1	This manual may be revised in the future without notice owing to improvements.
	2	All efforts have been made to produce the best manual possible, but if users notice an error or other problem, we ask that they notify us.
	3	Item 2 notwithstanding, HuMANDATA cannot be held liable for the consequences arising from use of this product.
	4	HuMANDATA cannot be held liable for consequences arising from using this product in a way different from the uses described herein, or from uses not shown herein.
	5	This manual may not be copied, reproduced, or distributed without permission.

● **Revision History**

Date	Revision	Description
Apr. 4, 2016	v1.0	Initial release
Aug. 25, 2016	v1.1	Add new products of USB-501 and USB-206
Mar. 23, 2017	v1.2	Add new products of USB-045A and USB-045V
Feb. 19, 2018	v1.3	Add new products of USB-502
Dec. 10, 2018	v1.4	Add new products of USB-207
Nov. 19, 2019	v1.5	Add new products of USB-403

● Introduction

Thank you very much for purchasing our product.

This manual describes the installation procedure for the CDC class driver.

Refer to relevant instructions for your operating system

(Windows 10/8.1/8/7/Vista/XP).

There are two types of USB drivers that are used in our products FTDI and CDC class driver. This manual describes the CDC class driver. Please be careful so as not to mistake by referring to following.

CDC class		
USB-034	USB-036	USB-037
USB-045A	USB-045V	USB-201
USB-205	USB-206	USB-207
USB-403	USB-501	USB-502
LNX-202		

Please refer to the manual of "USB Driver Installation Guide" for installation of the following USB products.

FTDI		
USB-003	USB-003-RJ45	USB-006
USB-009	USB-010	USB-013
USB-017	USB-018	USB-019
USB-020	USB-021	USB-024
USB-025	USB-026	USB-027
USB-033	USB-033SI	USB-039
USB-040	USB-046	USB-047
USB-301	USB-302	USB-304
USB-305	USB-401	USB-402
USB-503	LNX-001	

1. Installation procedure

This section describes the installation procedure.


1. Insert the driver CD into the CD drive and open the folder
CD_Drive:\Driver\CDCDRV-***.

Latest CDC class driver is available for download. Please refer to the section 3 **Downloads** for the URL.

2. Click on the setup.exe file icon.
3. In Windows 10/8.1/8/7/Vista, a User Account Control dialog box opens.
Click on the "Yes" button.
4. Window appears on the screen for decompressing the compressed driver file.
Click on the "Next" button.
5. USB Driver Installer Ver.* window appears.

Do not connect the product to your PC when you are installing the driver.

After checking the "Confirm disconnection", and click on the "OK" button.

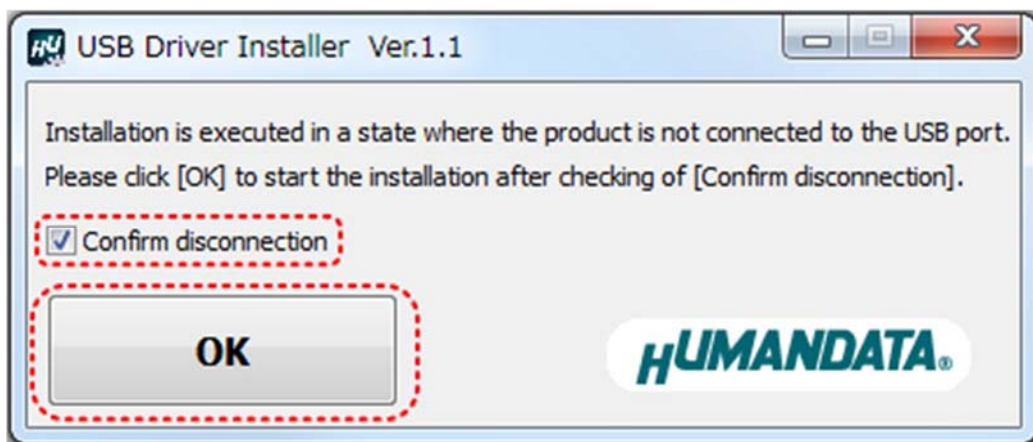

6. The installation wizard starts. Click on the "Next" button.
7. In Windows 10/8.1/8/7/Vista, Windows Security dialog box appears twice during the installation. Click on the "Yes" button.
8. When the installation is complete, the installation completed dialog box appears. Click on the "Finish" button.

9. -1) **Windows 10/8.1/8/7/Vista**

Connect the product to your PC, an icon appears in the notification area, and the driver is installed automatically.

When the driver has been successfully installed and the USB-201 is connected to your PC, "USB-201 HuMANDATA LTD." appears in Device Manager.

-2) **Windows XP**

Connect the product to your PC, the Found New Hardware Wizard starts.

Select *No, not this time*, and click on the "Next" button.

Select *Install the software automatically*, and click on the "Next" button.

When the installation is complete, the message "Completing the Found New Hardware Wizard" appears. Click on the "Finish" button.

In Windows XP, you need to run several times the above steps. Number of times may vary depending on each product.


When the driver has been successfully installed and the USB-201 is connected to your PC, "USB-201 HuMANDATA LTD." appears in Device Manager.

2. Uninstallation procedure

This section describes the uninstallation procedure.

If you want to delete a file that is stored in the PC (INF, etc.). Please use the dedicated uninstaller.

1. Insert the driver CD into the CD drive and open the folder
CD_Drive:¥Application¥Uninstaller.
Latest Uninstaller.exe is available for download. Please refer to the section 3 **Downloads** for the URL.
2. Click on the Uninstaller.exe file icon.
3. In Windows 10/8.1/8/7/Vista, a User Account Control dialog box opens.
Click on the "Yes" button.
4. Window appears on the screen for decompressing the compressed driver file.
Click on the "Next" button.
5. USB Driver Uninstaller Ver.* window appears.
Do not connect the product to your PC when you are installing the driver.
After checking the "Confirm disconnection", and click on the "OK" button.

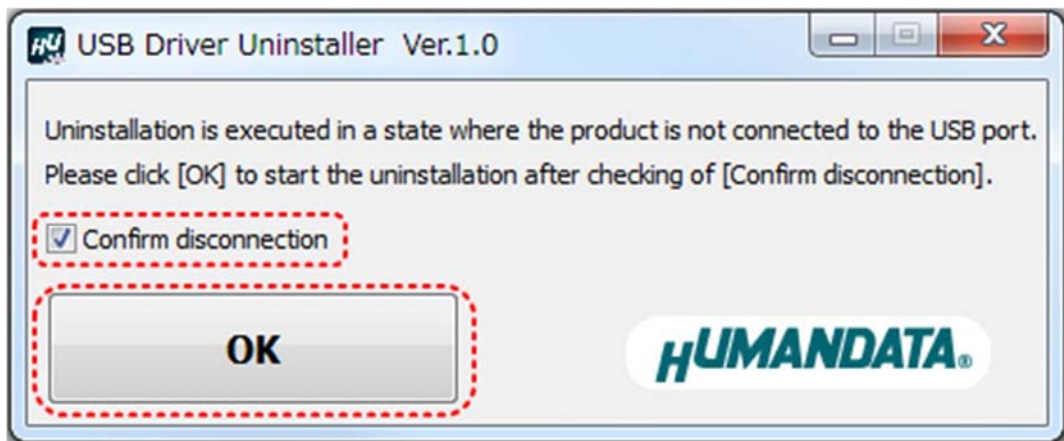

6. When the uninstallation is complete, click on the "OK" button.

3. Downloads

Latest CDC class driver is available for download from the link following.

<https://www.hdl.co.jp/en/faspc/Drivers/index.html>

Latest Uninstaller.exe for uninstallation of the CDC class driver is available for download from the link following.

<https://www.fa.hdl.co.jp/en/fa-suport.html>

4. Warranty and compensation

Please refer to the following URL for the warranty.

<https://www.fa.hdl.co.jp/en/fa-warranty.html>

CDC Class Driver Installation Guide

Ver. 1.5 Nov. 19, 2019

HuMANDATA LTD.

Address: 1-2-10-2F, Nakahozumi, Ibaraki
Osaka, Japan
ZIP 567-0034

Tel: 81-72-620-2002 (Japanese)

Fax: 81-72-620-2003 (Japanese/English)

URL: <https://www.fa.hdl.co.jp> (Japan)

[https://www.fa.hdl.co.jp/en\(Global\)](https://www.fa.hdl.co.jp/en(Global))
