

USB Driver Installation Guide

Ver. 1.5

[USB series]

1ch.		
USB-003	USB-003-RJ45	USB-006
USB-010	USB-013	USB-017
USB-021	USB-025	USB-026
USB-040	USB-047	USB-301
USB-305	USB-503	USB-504
2ch.		
USB-009	USB-018	USB-019
USB-020	USB-046	USB-302
USB-304		
4ch.		
USB-033	USB-033SI	USB-039
8ch.		
USB-401	USB-402	


[LNX series]

LNX-001		
---------	--	--

Table of Contents

- Precautions 1
- Revision History 1
- Introduction 2
- 1. Installation procedure..... 3
- 2. Uninstallation procedure..... 5
- 3. Downloads 7
- 4. Warranty and compensation..... 7

● **Precautions**

 Attention	1	This manual may be revised in the future without notice owing to improvements.
	2	All efforts have been made to produce the best manual possible, but if users notice an error or other problem, we ask that they notify us.
	3	Item 2 notwithstanding, HuMANDATA cannot be held liable for the consequences arising from use of this product.
	4	HuMANDATA cannot be held liable for consequences arising from using this product in a way different from the uses described herein, or from uses not shown herein.
	5	This manual may not be copied, reproduced, or distributed without permission.

● **Revision History**

Date	Revision	Description
Apr. 4, 2016	v1.0	Initial release
Aug.26, 2016	v1.1	Add a new product
Sep.24, 2017	v1.2	Add a new product
Mar.16, 2018	v1.3	Add a new product
Mar.29, 2019	v1.4	Add a new product
Jan.7, 2020	v1.5	Add a new product

● Introduction

Thank you very much for purchasing our product.

This manual describes the installation procedure for the FTDI USB driver.

Refer to relevant instructions for your operating system

(Windows 10/8.1/8/7/Vista/XP).

There are two types of USB drivers that are used in our products FTDI and CDC class driver. This manual describes the FTDI USB driver. Please be careful so as not to mistake by referring to following.

FTDI		
USB-003	USB-003-RJ45	USB-006
USB-009	USB-010	USB-013
USB-017	USB-018	USB-019
USB-020	USB-021	USB-025
USB-026	USB-033	USB-033SI
USB-039	USB-040	USB-046
USB-047	USB-301	USB-302
USB-304	USB-305	USB-401
USB-402	USB-503	USB-504
LNX-001		

Please refer to the manual of "CDC Class Driver Installation Guide" for installation of the following USB products.

CDC class		
USB-034	USB-036	USB-037
USB-045A	USB-045V	USB-201
USB-205	USB-206	USB-207
USB-403	USB-501	USB-502
LNX-202		

1. Installation procedure

This section describes the installation procedure.

1. Insert the driver CD into the CD drive and open the folder
*CD_Drive:\Driver\USBDRV-CDM****.

Latest USB driver is available for download. Please refer to the section 3 **Downloads** for the URL.

2. Click on the setup.exe file icon.
3. In Windows 10/8.1/8/7/Vista, a User Account Control dialog box opens.
Click on the "Yes" button.
4. Window appears on the screen for decompressing the compressed driver file.
Click on the "Next" button.
5. USB Driver Installer Ver.* window appears.

Do not connect the product to your PC when you are installing the driver.

After checking the "Confirm disconnection", and click on the "OK" button.



6. The installation wizard starts. Click on the "Next" button.
7. In Windows 10/8.1/8/7/Vista, Windows Security dialog box appears twice during the installation. Click on the "Yes" button.
8. When the installation is complete, the installation completed dialog box appears. Click on the "Finish" button.

9. -1) **Windows 10/8.1/8/7/Vista**

Connect the product to your PC, an icon appears in the notification area, and the driver is installed automatically.

When the driver has been successfully installed and the USB-003 is connected to your PC, "USB-003 HuMANDATA LTD." appears in Device Manager.

-2) **Windows XP**

Connect the product to your PC, the Found New Hardware Wizard starts.

Select ***No, not this time***, and click on the "Next" button.

Select ***Install the software automatically***, and click on the "Next" button.

When the installation is complete, the message "Completing the Found New Hardware Wizard" appears. Click on the "Finish" button.

In Windows XP, you need to run several times the above steps. Number of times may vary depending on each product.

When the driver has been successfully installed and the USB-003 is connected to your PC, "USB-003 HuMANDATA LTD." appears in Device Manager.

2. Uninstallation procedure


HFTClean.exe is a tool to uninstall the USB driver. It is possible to easily uninstall the USB driver of the product built-in the FTDI chip with the HuMANDATA Vendor ID. This program will be operated with the following OS.

Windows10(32/64bit)
Windows8/8.1(32/64bit)
Windows7(32/64bit)
WindowsVista(32/64bit)
WindowsXP(32/64bit)

This uninstaller uninstalls the driver as an argument of the vendor ID of HuMANDATA product by using the CDM Uninstaller 1.4 provided by the FTDI.

1. Insert the driver CD into the CD drive and open the folder
CD_Drive:¥ Application¥ HFTClean.
Latest HFTClean.exe is available for download. Please refer to the section 3 **Downloads** for the URL.
2. Click on the HFTClean_v**.exe file icon.
3. In Windows 10/8.1/8/7/Vista, a User Account Control dialog box opens.
Click on the "Yes" button.
4. Window appears on the screen for decompressing the compressed driver file.
Click on the "Next" button.

5. Exe file are extracted to a temporary folder. Application will be automatically run.

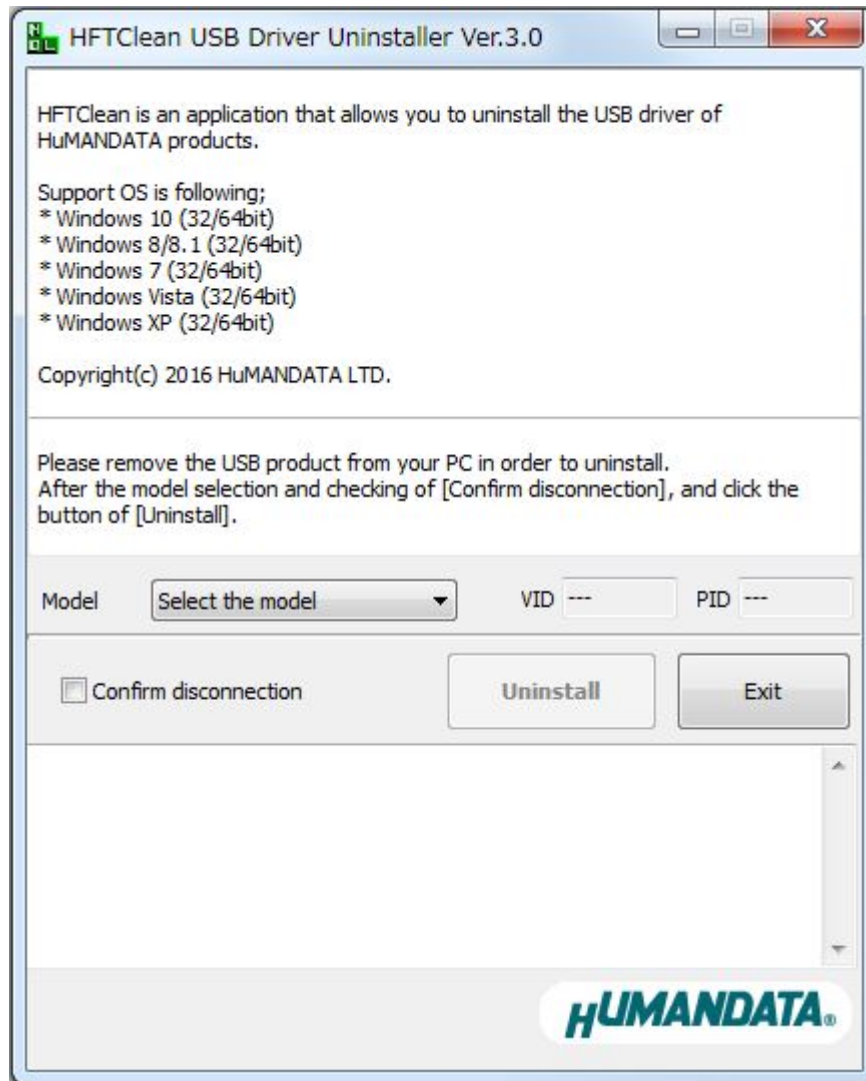

6. Select the model that you want to uninstall. It is also possible to specify all of the model.
7. **Do not connect your PC to the product when you are uninstalling the driver.** After checking of "Confirm disconnection", and click on the "Uninstall" button.

* After HFTClean.exe is terminated, uncompressed files are automatically deleted.

3. Downloads

Latest USB driver is available for download from the link following.

<https://www.hdl.co.jp/en/faspc/Drivers/index.html>

Latest HFTClean.exe for uninstallation of the USB driver is available for download from the link following.

<https://www.fa.hdl.co.jp/en/info-support.html>

4. Warranty and compensation

Please refer to the following URL for the warranty.

<https://www.fa.hdl.co.jp/en/fa-warranty.html>

USB Driver Installation Guide

Ver. 1.5 Jan. 7, 2020

HuMANDATA LTD.

Address: 1-2-10-2F, Nakahozumi, Ibaraki
Osaka, Japan
ZIP 567-0034

Tel: 81-72-620-2002 (Japanese)

Fax: 81-72-620-2003 (Japanese/English)

URL: <https://www.fa.hdl.co.jp> (Japan)

<https://www.fa.hdl.co.jp/en>(Global)
